

# CVD-2010, CVD-2010P, CVD-2010PS

## Cellular Voice/Dialer System

### INSTALLATION INSTRUCTIONS

*CVD-2010 is a complete four-channel monitoring system. Faults in N.O. or N.C. zone circuits, and AC Power Out or AC Power Restored, prompt either cellular only, or landline backed by cellular calling of up to eight phone numbers sequentially. Pre-recorded messages, released when calls are answered, identify events specific to locations and conditions being monitored.*

#### INPUT/OUTPUT PRE-WIRING PREPARATION

Knockouts are provided in the Cabinet for wire entry/exit when using metallic or non-metallic conduit, or other shielding.

Run wiring from monitoring devices (up to four) to the pre-determined Cabinet location. Be sure to mark wires N.O. or N.C. per device configuration.

Route the 16AWG White Power Cord for the Transformer from a 120VAC outlet to the Cabinet location. Extend wire if necessary.

Route the cell phone charger wire from a nearby AC outlet to the Cabinet location. Extend wire if necessary.

If a bell, light, or siren is part of your system, you should route that wire to the Cabinet location at this time.

#### AC POWER MONITORING PREPARATION

The AC Adapter must be used when monitoring AC power.

Route the AC Adapter (plugged into the DC Power Pack) to a 120VAC outlet on a circuit that must remain on-line. The Adapter cable can be extended hundreds of feet to reach a desired location without violating electrical codes.

An entire facility, a specific area, a machine, etc., may be monitored for power out/power restored. If machinery is 240VAC, voltage power to the AC Adapter must be stepped down to 120VAC.

#### CABINET MOUNTING

Four teardrop holes in the back of the metal Cabinet can be used for surface mounting the Cabinet.

#### INPUT/OUTPUT CONNECTIONS

A Wiring Diagram on the Cabinet door identifies all necessary and optional connections. The suggested connection sequence is as follows:

1. Connect inputs to the Channels 1 through 4 terminals on the Terminal Block.
2. Connect local alarm device (Bell, Light, Siren, etc.) to +12VDC and + AUX Output Terminals.
3. Connect ends of the 16AWG White Power Cord to the Mini Controller, AC Input. Connect other ends of 16AWG White Power Cord (routed to AC outlet) to the Transformer outer terminals marked AC.
4. Plug cell phone charger wire into cell phone.
5. Connect an "in cabinet type" backup battery (see COMPONENT IDENTIFICATION) by pushing the Red and

Blue Connectors, routed from the Mini Controller Location Battery Rechargeable, onto the battery posts. A standard 12V, 7.0Ah battery is recommended. Battery is not supplied with the System.

Note: 12V backup (battery in cabinet or other source) supplies power to the Cell Phone Docking Module during a power outage. The Dialer will be powered by the DC Power Pack for up to 30 hours during an outage.

#### CELL PHONE DOCKING (PARING)

If you have CVD-2010P or CVD-2010PS, make sure that all power connections are completed (power up System) and then proceed to PROGRAMMING NOTES below.

If you have a CVD-2010 model, "your" cell phone must be paired to the Cell Phone Docking Module.

1. Make sure that all power connections are completed: Power up System.
2. Hold down the button (marked with a single dot) on the Docking Module until it starts flashing.
3. Enable Bluetooth on your phone, or search for Bluetooth, or "Handsfree" devices, or search for headsets.
4. Select XLink Gateway.
5. Enter PIN when prompted. See label on Cell Phone Docking Module for PIN code. Note: When paring is complete, the button light (marked with single dot) turns to solid green.

Proceed to PROGRAMMING NOTES.

#### LANDLINE CALLING WITH CELLULAR BACKUP

The system can use a landline as the primary connection and cellular service as backup. If the landline is disrupted or cut, the system will immediately switch to cellular.

To enable landline, Route a telephone cord (RJ11 to RJ11) from the lower RJ11 jack on the Cell Phone Docking Module (marked with telephone pole symbol) to a telephone wall jack.

#### PROGRAMMING NOTES

Complete programming instructions for the CVD-2010 Dialer are found in its User Manual.

Please pay attention to N.O. or N.C. when setting up channels or zones.

When entering phone numbers, remember to enter a # symbol after the last phone number digit. A # symbol is required to make the cell phone dial.

To leave a message, include three pauses after the # symbol.

For pagers, program for a regular phone number and after the # symbol insert five pauses followed by the return call number and the # symbol.

If installation and programming are completed, proceed to testing the system by simulating channel or zone event.

#### NOTE

The Dialer is Velcro mounted and can be pulled out for programming and to access switches on back.

Thank you for choosing...

### COMPONENT IDENTIFICATION

See below.



(T) 800-227-1592  
(F) 858-413-0124

Email: sales@unitedsecurity.com  
Web: www.unitedsecurity.com

40 Years of Superior American Manufacturing  
Made in U.S.A


Cell Phone  
Docking Module

AC Adapter




Dialer

DC  
Power Pack

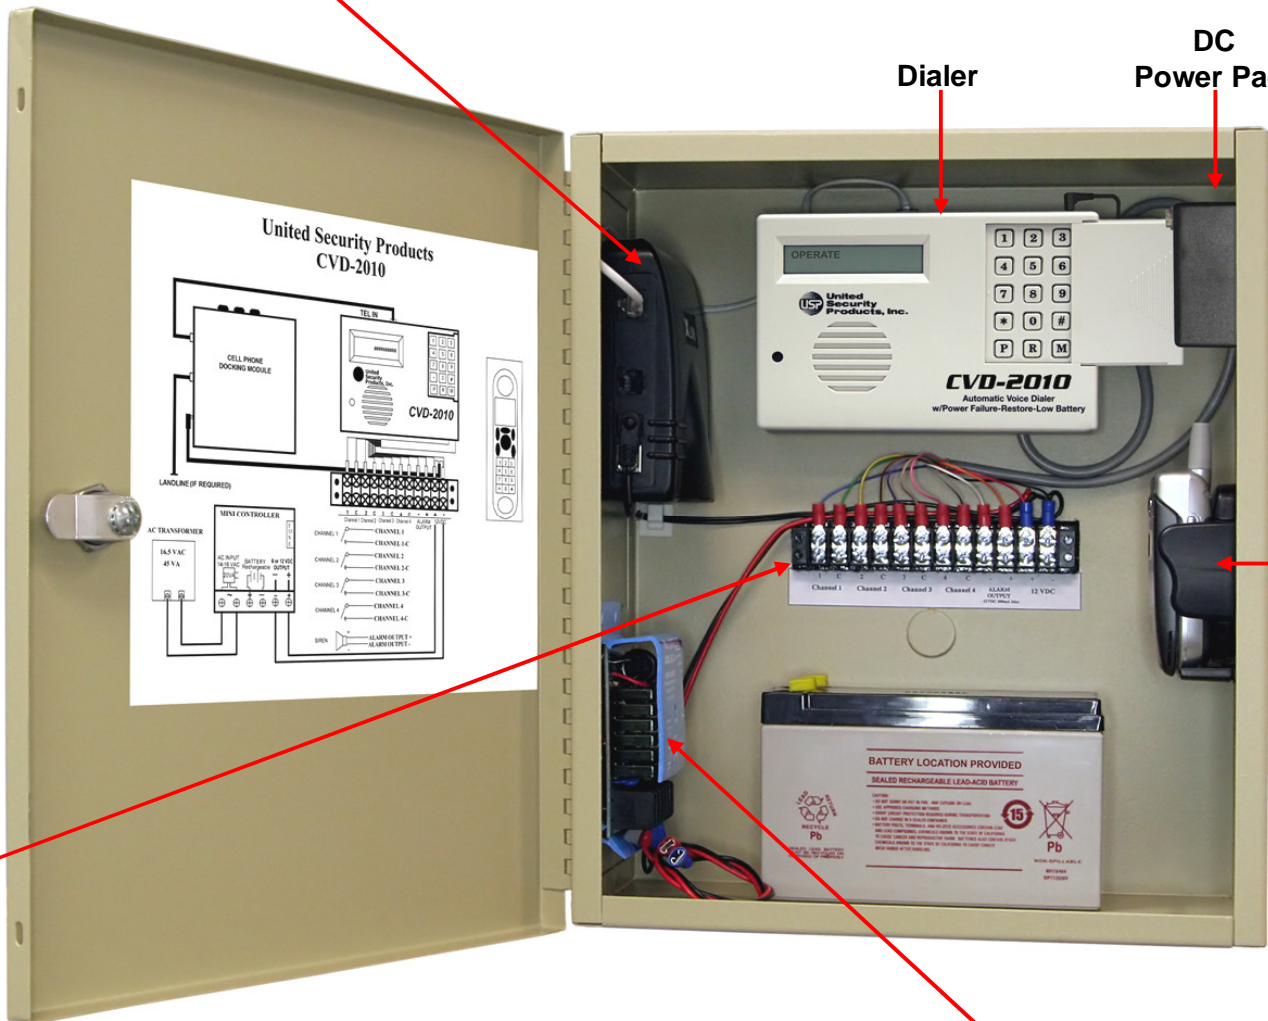

Terminal Block

16AWG White Power Cord

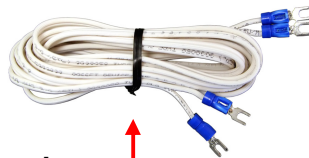

Mini Controller

Transformer



Cell Phone Holder

Cell Phone included with CVD-2010P and CVD-2010PS  
Battery not included with Systems

REV. 07.10